

I'm not robot!


Printing From a Memory Card

Your product lets you print photos directly from your digital camera's memory card, just insert it into the memory card slot and you're ready to print.

See the online User's Guide for a list of compatible memory cards and instructions on copying memory card files from your product and a computer.

Inserting the Card

1. Make sure your printer is turned on.
2. Insert your card as shown.

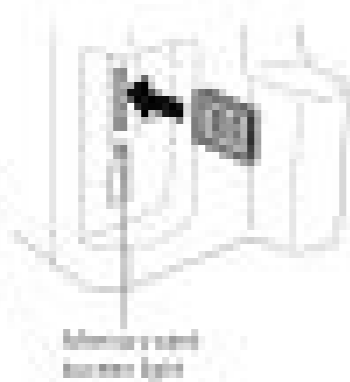

Note: Do not force the card into the slot; it won't go in until it clicks.

The memory card access light flashes; this may be. Now you can view your photos on the LCD screen and print them.

Removing the Card

After you finish printing your photos, follow these steps to remove the card:

1. Make sure the memory card access light is not flashing.
 - Caution:** Do not remove the card or turn off your printer while the memory card access light is flashing; you may lose data on the card.
2. If the product is connected to your computer with a USB cable, do one of the following before removing the memory card or turning off the printer:
 - **Windows:** Right-click the material your card (removable disk) in Computer, My Computer, or Windows Explorer, and select Eject.
 - **Mac OS X:** Drag the  to the trash icon from your desktop into the trash.
3. Pull the card straight out of the slot.

